


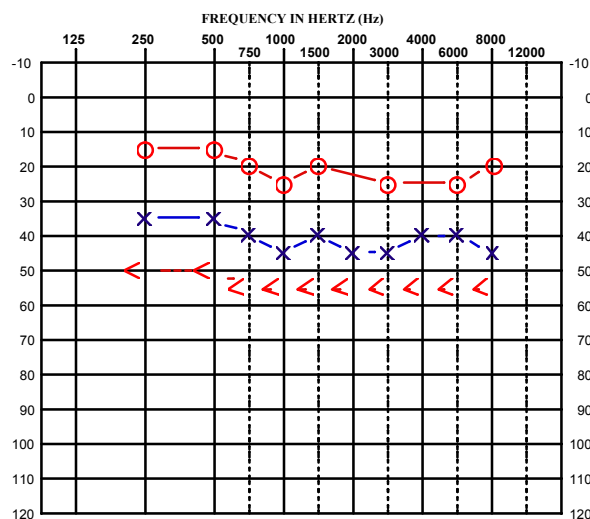

Patient Identifier **1234567**
 NAME **Able, Denny**
 D.O.B. **09/02/1941**
 Audiologist **John Doe, Au.D.**
 Physician
 Date of Service **01/06/2005**

Audiogram

**Hearing Aid**A_R A_LA_B**Cochlear Implant**C_R C_LH_R H_L**Audiometer:**

GSI 61

Transducer:

TDH-50 Phones

Method:

Conventional

Reliability:

Good

Right Device


Make/Model

Settings

Left Device

Make/Model

Settings

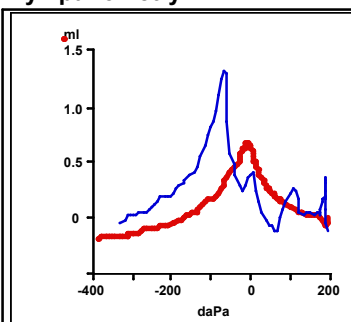Tympanometry

Thick (red) - right, Thin (blue) - left

Tympanogram Diagnostic

	Right	Left
Probe Tone (Hz)	226	226
Ear Canal Volume	1.30	1.60
Peak Admittance (ml)	0.70	1.40
Peak pressure (daPa)	15	-45
Curve Type	A	As

Condition	Test Measure	%	Raw Score	Level (dB SPL)	MLV/CD	S:N Ratio

Notes

This is a test of the text measurements.

Wound care instructions: 1) Keep steri-strips dry for first 24 hours, then you can let water and soap run over them. Just gently pat them dry afterwards. 2) The steri-strips should stay on for a week. After that you can remove them whenever you want. They will gradually peel off and typically fall off by themselves the second week after surgery. You can just trim the edges as they come up during the first week.